


## WEATERREE

## INSTALLATION INSTRUCTIONS




Pre-attached universal adaptor for quick and easy installation





**Pinch Tab** 


Technologically advanced rubber compound provides a consistent clear wipe

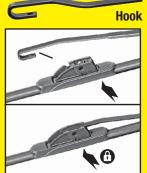

Side Lock

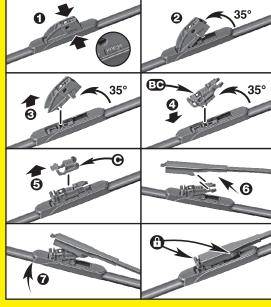

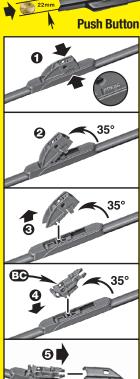

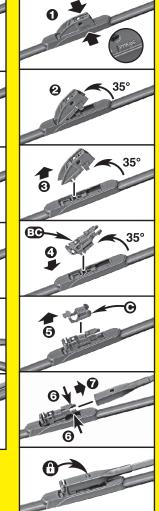

**Push Button** 



\*Always check to make sure the blade is fully engaged after installation.




## WEARLERRE

## INSTALLATION INSTRUCTIONS

Aerodynamic design provides superior windshield contact

Pre-attached universal adaptor for quick and easy installation







**Pinch Tab Button** 



